


OPERATING INSTRUCTIONS

MODEL 200

THERMOMETER

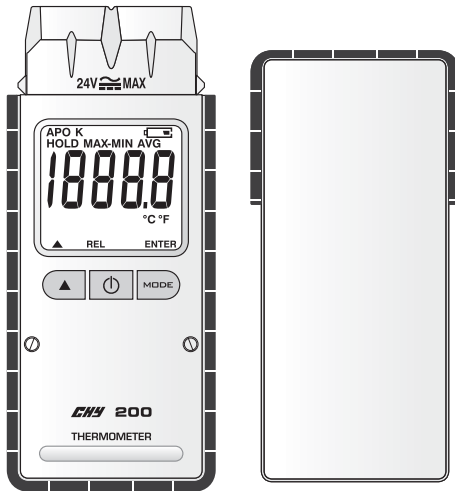

SPECIFICATIONS

Range:

K-TYPE(0.1°C) -100°C to 1372°C
 K-TYPE(1°C) -100°C to -200°C
 K-TYPE(0.1°F) -100°F to 2000°F
 K-TYPE(1°F) 2000°F to 2501°F
 K-TYPE(1°F) -100°F to -328°F

Unit: Celsius or Fahrenheit

Resolutions: 0.1°C/1°C · 0.1°F/1°F

Measurement rate: 1 time/second

Accuracy:

±(0.1%rdg+1°C) on -60°C to 1372°C
 ±(0.1%rdg+2°C) on -60°C to -200°C
 ±(0.1%rdg+2°F) on -76°F to 2501°F
 ±(0.1%rdg+4°F) on -76°F to -328°F

According to temperature standard ITS-90.

Accuracy: Stated accuracy at 18°C to 28°C (64°F to 82°F), <75% R.H. not including thermocouple error.

Temperature Coefficient: 0.1 times the applicable accuracy specification per °C out of 18°C to 28°C (64°F to 82°F)

Operating environment: 0°C to 50°C(32°F to 122°F) at <70% R.H

Storage temperature: -20°C to 60°C(-4°F to 140°F), 0 to 80% R.H. with battery removed from meter

Low battery indication: The "⎓" is displayed when the battery voltage drops below the operating level

Battery: 1.5Vx2pcs AAA size

Battery Life: 250 hours typical with alkaline battery

Dimensions: 24.7mm(T) x 50.9mm(W) x 132.9mm(H)

Weight: Approx. 134.1g including batteries and 1 piece of thermocouple

OPERATIONS

There are 3 operation modes, namely Measurement Mode, Set Mode and Hold Mode.

1. Turning on and off meter:

When power is off, a short push on "⏻" key turns on the meter and enter Measurement Mode.

When power is on, press and hold "⏻" key for 2 seconds turns the power off.

2. Measurement Mode:

If there is thermocouple in the input socket, measurement starts after power on.

If thermocouple is not in the input socket before turning on, the display shows "OL".

Once thermocouple is inserted, measurement starts immediately, but record function did not work immediately till 3 times update of temperature readings.

Backlight:

In measurement mode, a short push on "⏻" key turns on the backlight for dark environment, it goes off automatically after 15 seconds if without further operation.

Relative Mode:

In measurement mode, short push on "▲" key to enter relative mode with indicator "REL" shows at bottom of LCD.

After entering this mode, the meter will zero the display and store last measurements as a reference values. Shown on display are the relative values against these reference values.

Change reference value: Short push on "▲" key again, meter will store last measurement as a reference value again.

Exit relative mode: Hold "▲" key for 2 seconds to exit relative mode.

3. Set Mode:

In set mode, user can turn on/off APO function, measurement unit and set offset of thermocouple.

(APO = Auto Power Off, when APO is ON, the meter power off automatically if no operation in 10 minutes)

When power is off, press and hold "⏻" key for 2 seconds to enter Set Mode.

In Set Mode, press "Mode" key each time move settable position/digit in following sequence (indicator of settable position/digit blinks.)

3.1 APO ON/OFF: short push on "▲" key switches between ON and OFF. Push "MODE" key to save APO setting and enter to setting measurement unit.

3.2 Measurement unit: short push on "▲" key switches between °C and °F. Push "MODE" key to save unit setting and enter to setting to the right of decimal point thermocouple offset.

3.3 Digit to the right of decimal point of thermocouple offset blinks, short push on "▲" key increases this digit from 0 to 9 and then to 0. Push "MODE" key to save the setting and enter setting digit to the left of decimal point.

3.4 Digit to the left of decimal point of thermocouple offset blinks, short push on "▲" key increases this digit from 0 to 9 and then to 0. Push "MODE" key to save the setting and enter setting +/- sign of thermocouple offset.

3.5 Under line of +/- sign of thermocouple offset blinks, short push on "▲" key switches between "no sign (+)" and "-". Push "MODE" key to save the setting, exit setting mode and enter Measuring mode. (Please refer to the section of Measurement Mode.)

※Note: To turn off power in Set Mode abandon the current setting and previous settings remain unchanged. If "⎓" indicator appeared, the setting value can works till power off but did not save to meter.

4. Hold Mode:

In Measurement Mode, short push "Mode" key to enter Hold Mode with indicator "HOLD" shows at upper left corner of LCD.

Right after entering this mode, shown in the LCD is the last measurement and the reading will not be updated with new measurement.

Push "Mode" key each time the display changes in following sequence:

4.1 Last Measurement: with indicator "HOLD".

4.2 Maximum value recorded: with indicator "HOLD" + "MAX".

4.3 Minimum value recorded: with indicator "HOLD" + "MIN".

4.4 Maximum-Minimum value recorded: with indicator "HOLD" + "MAX-MIN".

4.5 Average of values recorded: with indicator "HOLD" + "AVG".

4.6 Exit the Hold Mode and return to Measurement Mode.

To clear the recorded values:


In Hold Mode and during viewing MAX, MIN, MAX-MIN or AVG, press and hold "Mode" key for 2 seconds, to clear the recorded data and return to measurement mode.

MAINTENANCE

WARNING

To avoid possible electrical shock, disconnect the thermocouple connectors from the thermometer before removing the cover.

Installing and Replacing Battery

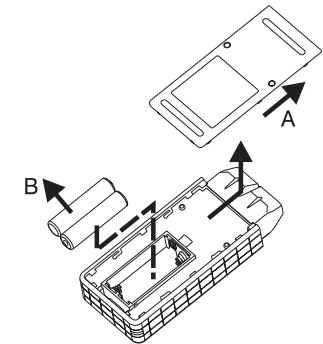

A. Battery Cover
 B. Battery

- Power is supplied by 2pcs 1.5V (AAA SIZE).
- The "⎓" appears in the display when battery replacement is needed.
- Push the Battery Cover and lift it in the direction as shown in the figure.
- Remove the batteries from battery compartment.
- Replace with 2 new AAA batteries with polarity as indicated on the bottom of Battery Compartment.
- Replace the Battery Cover.

Cleaning

Periodically wipe the case with a damp cloth and detergent, do not use abrasives or solvents.

SAFETY INFORMATION

It is recommended that you read the safety and operation instructions before using the thermometer.

WARNING

To avoid electrical shock, do not use this instrument when working voltages at the measurement surface over 24V AC or DC.

WARNING

To avoid damage or burns, do not make temperature measurement in microwave ovens.

CAUTION

Repeated sharp flexing can break the thermocouple leads. To prolong lead life, avoid sharp bends in the leads, especially near the connector.